

Premium Synchron 24/7 Mechanism



Lever A is a dual-purpose control. Lift this lever when body weight is removed from the chair to raise the seat height - or when body weight is placed on the seat to lower height.

Rotate Lever A $\frac{1}{4}$ turn forward and lean back into chair to engage the Synchron. Rotate lever $\frac{1}{4}$ turn rearwards to lock chair into position.

Lever B is the tension control adjustment for the Synchron mode (**Note:** the back of the chair **must** be in the forward position for this function to operate correctly).

Rotate lever forward to reduce the tension in the chair. Rotate lever rearwards to increase the tension. There are 8 positions to select from.

Lever C is an option and may not be fitted to your chair. This lever operates a seat-slide control. Rotate Lever C $\frac{1}{4}$ turn forwards to move seat forward. Rotate lever $\frac{1}{4}$ turn rearwards to lock seat-slide into position.

Rated to: 55kg - 100kg Lightweight
70kg - 130kg Standard
90kg - 150kg Heavy Duty

Rated for: 10 years

Standard Synchron Mechanism



Lever A operates seat height. Lift this when body weight is removed from the chair to raise seat height, or when body weight is placed on seat to lower height.

Lever F when fully depressed, places the chair into Synchron Mode, where the seat and back move in a fixed 2:1 ratio. Returning this lever to the horizontal position will lock the chair.

Control E is the tension control adjustment for the Synchron Mode. Turning the dial clockwise loosens the tension in the chair. Turning the dial anti-clockwise tightens the tension in the chair.

Lever D is used to lock the back and seat together. Raising this lever will allow for the back to be removed from the chair. This lever may also be used to adjust the height of the back on some models.

Rated to: 110kg

Rated for: 5 years

2 Lever Ergo Mechanism



Lever A operates seat height. Lift this when body weight is removed from the chair to raise seat height, or when body weight is placed on seat to lower height.

Lever B adjusts the angle of the seat, and the position of the back. Lift this lever to make minor adjustments to both, and return this lever to the horizontal, when desired angle is reached.

Lever D is used to lock the back and seat together. Raising this lever will allow for the back to be removed from the chair. This lever may also be used to adjust the height of the back on some models.

Rated to: 110kg

Rated for: 5 years